

Index

Entries in ALL CAPS are programming functions which are arranged alphabetically in Section 3.

Absolute Offset	3-15	Factory Defaults	A-3
Access Codes, Entering	3-16	Fault LED, Keypad	4-2
Access Codes, Programming	3-8	Function 7000	3-13
Access Levels	1-8, 2-12, 3-8, 3-10	Function 7001	3-13
Active Program	3-7, 3-12	Function 7002	3-13
Address, DIP Settings	2-13, 2-14, 4-2	Function 7998	3-13
Address, Programming	3-6	Fuse Locations	2-3, 2-4
Analog High RPM	3-4	Fuse Part #'s	2-3, 2-4, 2-17, 4-5
Analog Modules, Mounting	2-9	Fuse Tester	2-17
Analog Modules, Specifications	A-2	Gray Code Program Select	2-7
Analog Offset	3-5	Hardware Inputs	1-8
ANALOG OUTPUT	3-4	High RPM, Analog	3-4
Analog Outputs, Intro	1-8	INCREASING DIR	3-10
ANALOG QTY	3-5	Input ANDing	1-8, 3-11
Baud Rate	3-5	INPUT STATUS	3-11
BCD Program Select	2-7	Input Terminals	2-5, 2-6
Binary Program Select	2-7	Inputs, Introduction	1-7
Boot, Washdown	1-8	Inputs, Wiring	2-6
Channel 91, Shift Register Window	3-22	KEYBOARD QTY	3-12
Channel Enable Input Terminals	2-5, 2-6	Keypad Diagnostics	4-2
CHN 91, Shift Register Window	3-22	Keypad Disable Terminal	2-5, 2-6
Clear Memory	3-13	Keypad Mounting	2-1
Codes, Access	3-8	Keypad Wiring	2-12
Communications, Address DIP Settings	2-13, 2-14	Keypad, Operation	3-1
Communications, Baud Rate	3-5	Keypad, Test	4-2
Communications, Intro	1-8	Keys, Layout	3-1
Communications, Programming	3-5	Keys, Using	3-1
Communications, RS-232/RS-485	2-15	LED, Keypad Fault	4-2
Communications, Termination DIP Settings ..	2-13, 2-14	LED, Status	4-1
Communications, Wiring	2-15	Machine Position, Display	3-12
Components, Layout	2-3, 2-4	Machine Setup, Initial	3-3
Controller Diagnostics	4-1	Machine Speed, Display	3-12
Controller Specifications	A-1	Main Screen	3-12
DEFAULT PROGRAM	3-7	MEMORY TESTS	3-13
Defaults, Factory Settings	A-3	Memory, Clearing	3-13
Diagnostics, Controller	4-1	Menu Tree	3-2
Diagnostics, Keypad	4-2	Menu Tree, Entering	3-12
Dimensions	2-2	Module Specifications	A-2
DIN Rail	2-2	Modules, Mounting	2-1
DIP Switches, Controller	2-13, 2-14	Motion ANDing	1-8, 3-14
DIP Switches, Keypad	2-13, 2-14	Motion Detection	3-15
Direction of Rotation	3-10	Mounting	2-1
Display, Testing	4-2	Negative Speed Comp	3-27
ENABLE CODES	3-8	OFFSET (encoder)	3-15
ENABLE OPTIONS	3-10	Offset, Analog	3-5
Encoder Direction	3-10	Operator Access	3-18
Encoder Troubleshooting	4-3		
Encoder Wiring	2-16		
Environment, Mounting	2-1		

Index (cont'd)

Entries in ALL CAPS are programming functions which are arranged alphabetically in Section 3.

Output Modules, General	2-8	Setpoints, Clearing	3-13, 3-23
Output Modules, Specifications	A-2	Setpoints, Defined	1-7
Output Modules, Wiring	2-9	Setpoints, Deleting	3-23
OUTPUT STATUS	3-16	Setpoints, Program Copy	3-18
Output Transistors, General	2-8	Setpoints, Pulse Copy	3-19
Output Transistors, Replacement	2-18	Setpoints, Pulse Modes	3-23
Output Transistors, Wiring	2-10, 2-11	Setpoints, Pulses	3-22
Outputs	1-7, 2-8	SHIFT POSITION	3-23, 3-25
Outputs, Analog	1-8, 2-8, 3-4	SHIFT REG ANDing	1-8, 3-24
PASSWORD, Entering	3-16	Shift Register Clear Terminal	2-5, 2-6
PER CHN ENABLE	3-17	Shift Register Input Terminal	2-5, 2-6
PGM SEL MODE	3-18	Shift Register Programming	3-24
PLC, Wiring Input from	2-6	Shift Register, Channel 91	3-25
PLC, Wiring Output to	2-10, 2-11	Sinking, Input Wiring	2-6
PluSNet II Communications	6-1	Sinking, Output Wiring	2-8
Position, Machine Setup	3-15	SOFTWARE VERSION	3-26, 4-2
Position, Machine, Display	3-12	Sourcing, Input Wiring	2-6
PROGRAM COPY	3-18	Sourcing, Output Wiring	2-8
Program Enable, Jumper Info	4-2	Specifications, Controller	A-1
Program Enable, Wiring	2-12	Specifications, Module	A-2
Program Select	3-7	Speed Compensation, Defined	1-8, 5-1
Program Select Formats	2-7	Speed Compensation, Leading/Trailing	5-4
Program Select Mode	3-18	Speed Compensation, Negative	3-27, 5-5
Program Select Terminals	2-5 thru 2-7	Speed Compensation, Programming	3-27
Program, Active, Display	3-12	Speed Compensation, Standard	5-2
Programming Access, Enable Options	3-10	Speed, Machine, Display	3-12
Programming Access, Functions	3-9	Status LED	4-1
Programming Access, General	1-8	Status, Inputs	3-11
Programming, Defaults	A-3	Status, Output	3-16
Programming, Initial	3-3	Terminal Block Part #'s	2-3, 2-4
Programs, General	1-7	Terminal Block, Keypad	2-12
PS-6244-17 Description	1-6	Terminal Blocks, Controller	2-1, 2-3, 2-4
PS-6244-25 Description	1-6	Terminals, Input	2-5, 2-6
PULSE COPY	3-19	Termination, Communications	2-13, 2-14
Pulses	1-7	Testing, Initial	3-3
Pulses, Programming	3-22	Timer, Watchdog, Test	3-13
RATE SETUP	3-21	TOGGLE RPM	3-27
RPM UPDATE	3-21	Transistor Outputs, General	2-8
RPM vs. Position, Display	3-28	Transistor Outputs, Wiring	2-10, 2-11
RPM, Toggling, Display	3-28	Tree, Menu	3-2
RS-232	3-5	Troubleshooting	4-4, 4-5
RS-485	3-5	Version, Software	3-26, 4-2
SCALE FACTOR	3-21	Washdown Boot	1-8
Sensors, Input, Wiring	2-6	Watchdog Timer, Test	3-13
Serial Communications, General	1-8	Wiring, General	2-1
SETPOINT USE	3-22	Wiring, Inputs	2-6
SETPOINTS	3-22	Wiring, Keypads	2-12
Setpoints, Adding	3-22	Wiring, Output Modules	2-9
Setpoints, Always "On"	3-23	Wiring, Output Transistors	2-10, 2-11
Setpoints, Changing	3-23	Wiring, Power Supply	2-1

PLuS 6244 Setpoint Record

Date: _____

PLuS Program #: _____ Description: _____

ANDED With...

CHN	On	Off	Motion		Shift	Speed Comp	Other Comments (multiple pulses, etc.)
			Input #	Level #	Count		
1	_____	_____	_____	_____	_____	_____	_____
2	_____	_____	_____	_____	_____	_____	_____
3	_____	_____	_____	_____	_____	_____	_____
4	_____	_____	_____	_____	_____	_____	_____
5	_____	_____	_____	_____	_____	_____	_____
6	_____	_____	_____	_____	_____	_____	_____
7	_____	_____	_____	_____	_____	_____	_____
8	_____	_____	_____	_____	_____	_____	_____
9	_____	_____	_____	_____	_____	_____	_____
10	_____	_____	_____	_____	_____	_____	_____
11	_____	_____	_____	_____	_____	_____	_____
12	_____	_____	_____	_____	_____	_____	_____
13	_____	_____	_____	_____	_____	_____	_____
14	_____	_____	_____	_____	_____	_____	_____
15	_____	_____	_____	_____	_____	_____	_____
16	_____	_____	_____	_____	_____	_____	_____
17	_____	_____	_____	_____	_____	_____	_____
18	_____	_____	_____	_____	_____	_____	_____
19	_____	_____	_____	_____	_____	_____	_____
20	_____	_____	_____	_____	_____	_____	_____
21	_____	_____	_____	_____	_____	_____	_____
22	_____	_____	_____	_____	_____	_____	_____
23	_____	_____	_____	_____	_____	_____	_____
24	_____	_____	_____	_____	_____	_____	_____
25	_____	_____	_____	_____	_____	_____	_____

Analog Outputs

Output Channel #: _____ ★ 4-20mA ★ 0-10 VDC Offset: _____ High RPM: _____

Output Channel #: _____ ★ 4-20mA ★ 0-10 VDC Offset: _____ High RPM: _____

Global Settings

Motion Detection Levels: L1: _____ RPM L2: _____ RPM

Shift Position: _____

Offset: _____

Comments: _____

Electro Cam Corp.

800-228-5487 (U.S.A. and Canada) • Web Site: www.electrocam.com • email: ecam@electrocam.com

PRINTED IN U.S.A

257 4/99