




PL-1746 PL μ S[®] Plug-In Module for the Allen-Bradley SLC 500 PLC

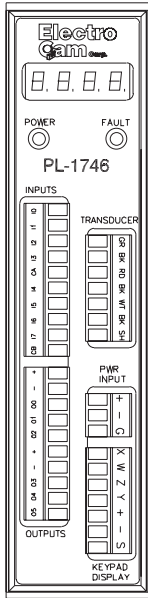


PL-1746-C02/C03

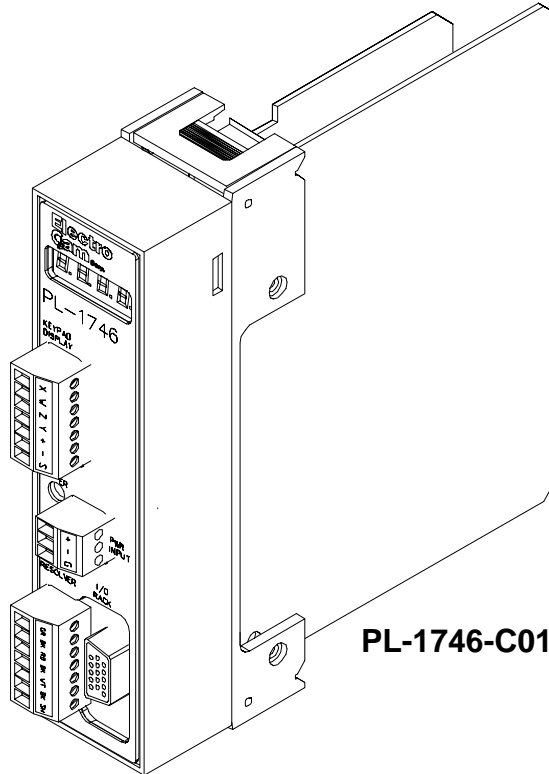

PL-1746-C01

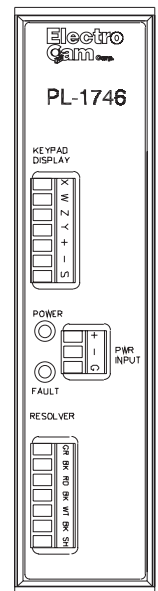

PL-1746-C04

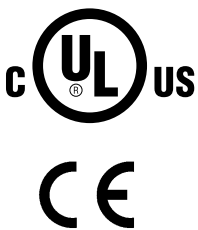

Programming & Installation Manual

July 2001



Electro Cam Corp.

13647 Metric Rd • Roscoe, IL 61073 USA • 815/389-2620 • FAX 815/389-3304 • 800-228-5487 (U.S.A. and Canada)

**Copyright © 2000
All Rights Reserved**

Neither this document nor any part may be reproduced or transmitted in any form or by any means without permission in writing from the publisher.

Electro Cam, **PL μ S**, **SLIMLINE**, and **PL μ SNET** are all registered trademarks of **Electro Cam Corp.**

This product incorporates technology which is licensed by Allen-Bradley Company, Inc. A-B has not technically approved, nor does it warrant or support this product. All warranty and support for this product and its application is provided solely by Electro Cam Corp.

Table of Contents

Chapter 1 - Introduction

Quick Start	1-1
Introduction to Programmable Limit Switches	1-2
Resolvers & Encoders	1-2
PL-1746-C01 Module Description	1-2
PL-1746-C02/C03 Module Description	1-3
PL-1746-C04 Module Description	1-3
Basic Terminology	1-4
PL-1746 Additional Features	1-5
Positions & Offsets	1-5

Chapter 2 - Installation

General Installation	2-1
PL-1746-C01 Module	2-2
PL-1746-C02/C03 Module	2-2
PL-1746-C04 Module	2-4
Resolver Installation	2-5
Resolver & Encoder Cables	2-7
PS-4108-13-L16 I/O Rack Installation	2-8
PS-4108-13-L08 I/O Rack Installation	2-13
PS-6400 Keypad Installation	2-18
DIP Switch Settings	2-19

Chapter 3 - How to Program the PLS

Backplane Programming	3-1
Remote I/O	3-4
Register Mapping	3-4
Quick Reference	3-5
PS-6400 Keypad Overview	3-14
Menu Tree	3-15

Chapter 4 - PLS Functions

Analog Output	Based on Speed	4-1
Analog Quantity		4-2
Channel Copy		4-2
Default Program		4-4
Direction of Rotation		4-4
EEPROM Checksum		4-5
Enable Codes	Operator, Setup, & Master Passwords	4-5
Enable Options	Operator Access to PLS Features	4-7
Group Offset	Reset Group Electrical Zero to Mechanical Zero	4-8
Group Position Display		4-10
Input Maps	Map M File Data to Input File Registers	4-11
Input Status		4-11
Interrupt Enable	Enable a PLS Output to Interrupt the SLC Processor	4-12
Interrupt Level		4-12
Keyboard Quantity		4-13
Machine Offset	Reset Global Electrical Zero to Mechanical Zero	4-14
Main Screen	Shows Position, Speed, and Active Program	4-15
Memory Tests		4-16
Model & Options		4-17
Motion ANDing	Associate Channels with Motion Detection Levels	4-17
Motion Detection	Set Speed Levels to Enable Outputs	4-18
Output Assignment		4-19
Output Enable ANDing	Select PLS Outputs to be Gated by Output Enable Input	4-19
Output Groups	Divide Outputs into Groups	4-20
Output Maps	Map Output File Registers to M File Data	4-22
Output Status	View or Force PLS Outputs	4-23
Password		4-24
Per Channel Enable	Enable Operator-Level Programming of Selected Channels	4-25
Program Copy		4-25
Pulse Copy		4-27
Pulses Used	View Total Number of Currently Programmed Pulses	4-29
Pulse Edit	Create, Modify, or Delete Pulses	4-30
Pulses	Create, Modify, or Delete Pulses	4-32
Rack Quantity		4-34

(Continued)

Table of Contents (cont'd)

Chapter 4 - PLS Functions (cont'd)

Rate Setup	Configure Speed Display	4-35
Resolver Mode		4-36
RPM Update Rate	Set How Frequently the Speed Display is Updated	4-36
Scale Factor		4-37
Shift Count		4-38
Shift Position		4-41
Shift Register Display		4-41
Shift Window		4-42
Software Version		4-43
Speed Compensation	Compensating PLS Output Timing for Delays in External Devices	4-44
Speed Comp Mode	Select Whether Leading & Trailing Pulse Edges Have Unique Values	4-45
Timed Outputs	Assign Timeout Durations to Pulses	4-45
Toggle RPM	Set the Speed at which the Display Changes from Position to Speed	4-46

Chapter 5 - Speed Compensation - Compensating PLS Output Timing for Delays in External Devices

Introduction to Speed Compensation	5-1
Standard Speed Compensation	5-1
Leading/Trailing Edge Speed Compensation	5-4
Negative Speed Compensation	5-6
Speed Compensation Guidelines	5-6

Chapter 6 - Groups & Modes - Using External Inputs to Condition PLS Outputs

Introduction to Groups & Modes	6-1	
Mode 0	Straight Cam Logic	6-2
Mode 1	Reset to Preset Position	6-3
Mode 2	Reset to Preset Position with One Cycle Enable	6-4
Mode 3	Outputs Gated by Group Inputs	6-5
Mode 4	One Cycle Enable with Edge-Triggered Input	6-6
Mode 5	One Cycle Enable with Level-Triggered Input and First Cycle Enable	6-7

Chapter 7 - Troubleshooting

General Troubleshooting	7-1
PS-6400 Keypad Troubleshooting	7-2
Resolver Troubleshooting	7-3
Rack Troubleshooting	7-4
Error Messages: PL-1746-C01 Module	7-6
Error Messages: PL-1746-C02/C03 Module	7-6
Error Messages: PS-6400 Keypad	7-7

Chapter 8 - Utility & Example Ladder Programs

Overview of Utility & Example Ladder Programs	8-1
C01 & C04 Configuration.rss	8-2
C01 & C04 Pulses.rss	8-4
C01 & C04 Example.rss	8-6
C02 & C03 Configuration.rss	8-19
C02 & C03 Pulses.rss	8-20
C02 & C03 Example.rss	8-20
C02 & C03-S Configuration.rss	8-20
C02 & C03-S Pulses.rss	8-20
C02 & C03-S Example.rss	8-20

Chapter 9 - Specifications & Factory Defaults

PL-1746-C01 Module Specifications	9-1
PL-1746-C02/C03 Module Specifications	9-2
PL-1746-C04 Module Specifications	9-3
Solid State Relay Specifications	9-4
Module Factory Defaults	9-5
Resolver Specifications	9-6

Appendix - Output Pulse Programming Information

Index

WARRANTY

1. Electro Cam Corp. warrants that for a period of twelve (12) months from the date of shipment to the original purchaser, its new product will be free from defects in material and workmanship and that the product conforms to applicable drawings and specifications approved by the Manufacturer. This warranty period will be extended on Distributor or OEM orders to a maximum of eighteen months to take into consideration Distributor or OEM shelf time.
2. The remedy obligations of Electro Cam Corp. under this warranty are exclusive and are limited to the repair, or at its option, the replacement or refund of the original purchase price of any new apparatus which proves defective or not in conformity with the drawings and specifications. Shipment of the claimed defective product to Electro Cam Corp. shall be at the cost of the consumer. Shipment of the repaired or replacement product to the consumer shall be at the cost of Electro Cam Corp. All claims must be made in writing to Electro Cam Corp., 13647 Metric Road, Roscoe, IL 61073 USA.
3. In no event, and under no circumstances, shall Electro Cam Corp. be liable for:
 - a. Any product damaged or lost in shipment. Inspection for damage should be made before acceptance or signing any delivery documents releasing responsibility of the delivering carrier.
 - b. Product failure or damages due to misuse, abuse, improper installation or abnormal conditions of temperature, dirt or other contaminants as determined at the sole discretion of Electro Cam Corp.
 - c. Product failures due to operation, intentional or otherwise, above rated capacities as determined at the sole discretion of Electro Cam Corp.
 - d. Non-authorized expenses for removal, inspection, transportation, repair or rework. Nor shall the manufacturer ever be liable for consequential and incidental damages, or in any amount greater than the purchase price of the equipment.
4. There are no warranties which extend beyond the description on the face hereof. This warranty is in LIEU OF ALL OTHER WARRANTIES, EXPRESSED OR IMPLIED INCLUDING (BUT NOT LIMITED TO) ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, ALL OF WHICH ARE EXPRESSLY DISCLAIMED. Any legal proceeding arising out of the sale or use of this apparatus must be commenced within (18) months of the date of shipment from the manufacturer.

This page intentionally left blank