

Index

Symbols

(-F) Option 1-4
(-G) Option 1-4, 3-16
(-G10) Option 1-4
(-H) Option 1-4
(-L) Option 1-4
(-MB) Option 1-4
(-MSV) Option 1-4
(-V) Option 1-4
(-W) Option 1-4

A

Absolute Offset 3-16
Access Codes, Entering 3-20
Access Codes, Programming 3-8
Access Levels 1-3, 2-12, 3-8, 3-10
Active Program 3-7, 3-13
Address, DIP Settings 2-13, 2-14, 7-2
Address, Programming 3-6
Analog High RPM 3-4
Analog Malfunction 7-4
Analog Modules, Mounting 2-9
Analog Modules, Specifications A-2
Analog Offset 3-5
Analog Output 3-4
Analog Outputs, Introduction 1-4
Analog Quantity 3-5

B

Baud Rate 3-7
BCD Program Select 2-7
Binary Program Select 2-7
Boot, Washdown 1-4

C

Cables, Keypad 2-12
Cables, Resolver 2-18
Channel Copy 3-6
Channels, Definition 1-3
Channels, Group 1-3, 5-2
Checksum, Serial Commands 6-12
Clear Memory 3-14
Clear Setpoints 3-14
Codes, Access 3-8
Communications, RS-232/RS-485 2-15
Communications 3-6
Communications, Address DIP Settings 2-13, 2-14
Communications, Baud Rate 3-6
Communications, Introduction 1-4, 6-1
Communications, Serial 6-3
Communications, Wiring 2-15
Communications, PL μ SNET II 6-1
Components, Layout 2-3, 2-4

Controller Diagnostics 7-1
Controller Specifications A-1
Copy, Program 3-21
Copy, Pulse 3-22

D

Default Program 3-7
Defaults, Factory Settings A-3
Diagnostics, Controller 7-1
Diagnostics, Keypad 7-2
Dimensions 2-2
DIN Rail 2-2
DIP Switches, Controller 2-13, 2-14
DIP Switches, Keypad 2-13, 2-14
Direction of Rotation 3-11
Display, Main 3-13
Display, Testing 7-2
Downloading Programming 6-1

E

Enable Codes 3-8
Enable Options 3-10
Environment, Mounting 2-1
Error Codes, Serial Commands 6-12

F

Factory Defaults A-3
Fault LED, Keypad 7-2
First Cycle Enable 2-5, 2-6, 5-6
Function 7000 3-14
Function 7001 3-14
Function 7002 3-14
Function 7998 3-14
Fuse Locations 2-3, 2-4
Fuse Part #'s 2-3, 2-4, 2-19, 7-6
Fuse Tester 2-19

G

Gray Code Program Select 2-7
Group Channels, Definition 1-3
Group Input Terminals 2-5, 2-6, 5-2
Group Offset 3-16
Group Position Display 3-10
Group Preset 3-16

H

Hardware Inputs 1-3, 2-5, 2-6
High RPM, Analog 3-4

I

Increasing Direction 3-11
Input Status 3-12
Input Terminals 2-5, 2-6
Inputs, Introduction 1-3
Inputs, Wiring 2-6

K

Keyboard Quantity 3-12
Keypad Diagnostics 7-2
Keypad Disable Terminal 2-5, 2-6
Keypad, Mounting 2-1
Keypad Operation 3-1
Keypad, Test 7-2
Keypad Wiring 2-12
Keys, Layout 3-1
Keys, Using 3-1

L

Leading/Trailing Speed Comp 1-4, 3-28, 4-4
LED, Keypad Fault 7-2
LED, Status 7-1

M

Machine Position, Display 3-13
Machine Setup, Initial 3-3
Machine Speed, Display 3-13
Main Screen 3-13
Memory Clearing 3-14
Memory Tests 3-14
Menu Tree 3-2
Menu Tree, Entering 3-13
Mode 0 5-3
Mode 1 5-3
Mode 2 5-4
Mode 3 5-5
Mode 4 5-6
Mode 5 5-7
Modes, Introduction 5-1
Module Specifications A-2
Modules, Mounting 2-1
Motion ANDing 1-4, 3-14
Motion Detection 3-15
Mounting, General 2-1

N

Negative Speed Compensation 3-29, 4-6

O

Offset 3-16
Offset, Analog Output 3-4
Operator Level Access 3-10, 3-21
Options, Controller 1-4
Output Channels, Definition 1-3
Output Enable ANDing 3-18
Output Enable Terminal 2-5, 2-6, 3-18
Output Forcing Function 3-19

Output Groups 3-18
Output Groups, Introduction 5-1
Output Groups, Programming 3-19, 5-2
Output Modules, General 2-8
Output Modules, Specifications A-2
Output Modules, Wiring 2-9
Output Status 3-19
Output Transistors, General 2-8
Output Transistors, Replacement 2-20
Output Transistors, Specifications A-3
Output Transistors, Wiring 2-10, 2-11
Outputs, Analog 1-4, 2-8, 3-4
Outputs, Timed 1-4, 3-30

P

Password, Entering 3-20
Per Channel Enable 3-21
PL μ SNET II Software 6-1
PLC, Wiring Input From 2-6
PLC, Wiring Output To 2-10, 2-11
Position, Display 3-10, 3-13
Position, Shaft 3-28
Program, Active 3-7, 3-13
Program Copy 3-21
Program, Default 3-7
Program Select Formats 2-7
Program Select Mode 3-22
Program Select Terminals 2-5, 2-6, 2-7
Program Selection Thru Keypad 3-7
Programming Access, Enable Options 3-10
Programming Access, Functions 3-9
Programming Access, General 1-3
Programming, Factory Defaults A-3
Programming, Initial 3-3
Programs, General 1-3
PS-6144-17 Description 1-2
PS-6144-25 Description 1-2
Pulse Copy 3-22
Pulse Modes 3-27
Pulses, Definition 1-3
Pulses, Programming 3-26

R

Rate Setup 3-24
Resolver Cables 2-18
Resolver Dimensions 2-17
Resolver Direction 3-11
Resolver Specifications A-3
Resolver Troubleshooting 7-3
Resolver Type 3-25
Resolver Wiring 2-16
RPM, Toggling 3-30
RPM Update Rate 3-25
RS-232 2-15
RS-485 2-15

S

- Scale Factor 3-25
- Sensors, Input Wiring 2-6
- Serial Command Checksum 6-12
- Serial Command Error Codes 6-12
- Serial Commands 6-3
- Serial Communications 6-3
- Serial Communications, General 1-4
- Setpoint Use 3-26
- Setpoints 3-26
- Setpoints, Adding 3-27
- Setpoints, Always ON 3-27
- Setpoints, Changing 3-27
- Setpoints, Clearing 3-14, 3-27
- Setpoints, Definition 1-3
- Setpoints, Deleting 3-27
- Setpoints, Program Copy 3-21
- Setpoints, Pulse Copy 3-22
- Setpoints, Pulse Modes 3-27
- Setpoints, Pulses 3-26
- Shaft Position 3-28
- Sinking, Input Wiring 2-6
- Sinking, Output Wiring 2-8
- Sinking/Sourcing 2-11
- Software Version 3-28
- Software Version, Keypad/Display 7-2
- Sourcing, Input Wiring 2-6
- Sourcing, Output Wiring 2-8
- Specifications, Controller A-1
- Specifications, Module A-2
- Speed Comp Mode 3-29
- Speed Compensation 3-28
- Speed Compensation & Modes 5-8
- Speed Compensation, Definition 1-4, 4-1
- Speed Compensation, Guidelines 4-6
- Speed Compensation, Leading/Trailing 1-4, 3-28, 4-4
- Speed Compensation, Negative 3-29, 4-6
- Speed, Display Machine 3-13
- Status, Input 3-12
- Status, LED 7-1
- Status, Output 3-19

T

- Terminal Block, Keypad 2-12
- Terminal Block Part #'s 2-3, 2-4
- Terminal Blocks, Controller 2-1, 2-3, 2-4
- Terminals, Input 2-5, 2-6
- Termination, Communications 2-13, 2-14, 2-15
- Testing, Initial 3-3
- Tests, Memory 3-14
- Timed Outputs 1-4, 3-30
- Timer, Watchdog 3-14
- Toggle RPM 3-30
- Transistor Outputs, General 2-8
- Transistor Outputs, Wiring 2-10, 2-11
- Tree, Menu 3-2
- Troubleshooting, General 7-4

U

- Uploading Programming 6-1

V

- Version, Software 3-28, 7-2

W

- Washdown Boot 1-4
- Watchdog Timer Test 3-14
- Wiring, Communications 2-15
- Wiring, General 2-1
- Wiring, Inputs 2-5, 2-6
- Wiring, Keypads 2-12
- Wiring, Output Modules 2-9
- Wiring, Output Transistors 2-10, 2-11
- Wiring, Power Supply 2-1